



Bluetooth® Smart Software v.1.4

Table of Contents



- Introduction to the Bluetooth Smart Software
- Bluetooth® Smart Software v.1.4

Bluetooth v.4.0, single mode compliant

- Supports master and slave modes
- Up to 8 simultaneous connections
- 100 kbps peak throughput

Implements all Bluetooth Smart functionality

- GAP, L2CAP, ATT, GATT
- Security manager: bonding, encryption
- Bluetooth Smart profiles

Simple API for external host processors

- BGAPI™: A simple protocol over UART or USB interfaces
- BGLIB™: A C library for host processors implementing BGAPI

Supports standalone applications as well

- BGScript[™]: A simple scripting language for writing applications
- Native C applications developed with IAR Embedded Workbench
- No separate host needed

Over-the-Air firmware upgrade


- Stack updates
- Application and GATT updates

Blutoooth Smart Profile Toolkit™

- XML based development tool for Bluetooth Smat profiles
- Fast and simple profile development

Small memory requirements


- ~4-6kB RAM
- ~80-100kB flash (depending of used features/profiles)
- Bluetooth qualified

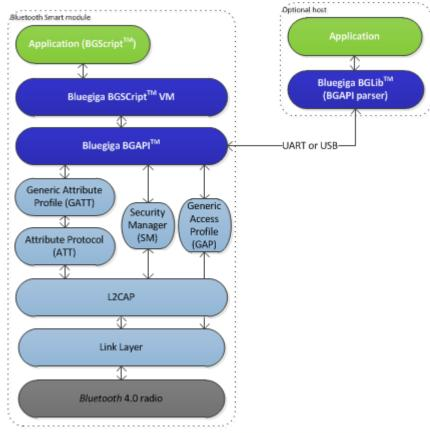





- BGAPITM protocol : A simple binary command, response and event protocol between the host and the stack
 - Used when a separate host (MCU) is used to control Bluetooth stack over UART/USB
 - Very small memory requirements size requirement and low implementation overhead

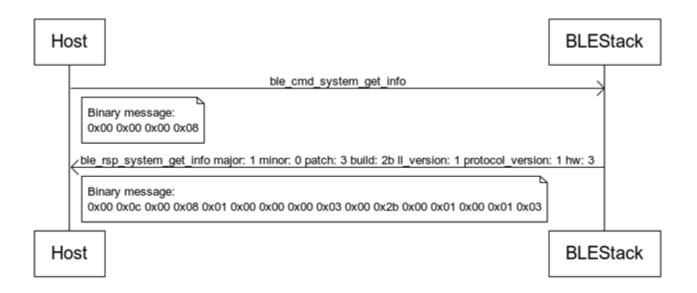



- BGLIB[™] library: A portable ANSI C library, which implements the BGAPI protocol
 - Easy to port to various architectures such as: ARM Cortex, PIC16/32 etc, Coldfire+ etc.
 - Uses fuction—call back architecture

```
C Functions
/* Function */
void ble_cmd_gap_connect_direct(
    bd_addr address ,
    uint8 addr_type ,
    uint16 conn_interval_min ,
    uint16 timeout
);

/* Callback */
void ble_rsp_gap_connect_direct(
    uint16 result ,
    uint8 conn
);
```



- BGScript™ scripting language : A very simple BASIC-like application scripting language
 - Used when applications are implemented on the Bluetooth radios MCU
 - Enables very fast application development and allows programs to be executed directly on the Bluetooth radio without the need of an external MCU

```
# System boot event listener: Executed when BLE112 is started

event system_boot (major ,minor ,patch ,build ,ll_version ,protocol_version ,hw )

# Configure ADV interval to 1000ms and start advertisements an all channels

call gap_set_adv_parameters (1600, 1600, 7)

# Start generic advertisement and enable connections

call gap_set_mode (2,2)

#Start a continuous software timer, which generates interrupts every 1000ms

call hardware_set_soft_timer (32768, 1, 0)
end
```




- Why to use BGScript™?
- Very simple to use
 - Fast development of simple Bluetooth Smart applications
 - Examples: Pairing, simple user interfaces, simple sensors
- Free software development tools
 - Code developed with any text or source code editor
 - Code compiled with Bluegiga's free compiler
- Several example scripts available
 - Heart Rate sensor
 - Proximity reporter
 - FindMe tag
 - Medical devices such as blood glucose
- Cuts out the need for external MCU
 - Reduced product eBoM
 - Smaller footprint
 - Faster time-to-market



- Bluetooth Smart Profile Toolkit™: A tool for creating Bluetooth Smart profiles
 - Bluetooth Smart profiles are very simple
 - Can be describes with a single file of XML
 - Profile toolkit is a Simple description language of Bluetooth Smart Profiles
- Several example profiles and services available
 - Heart Rate Sensor
 - Proximity Reporter
 - FindMe
 - Blood Glucose
 - Heath Thermometer
 - Battery Service
 - Vendor Specific services




- Standalone architecture example using Bluegiga BLE113 module
 - Sensors and peripherals are directly connected to the BLE113 via the IO interfaces
 - Application executed on the on-board 8051
 - Application developed with BGScript™ or C SDK and services and profiles with Profile Toolkit™

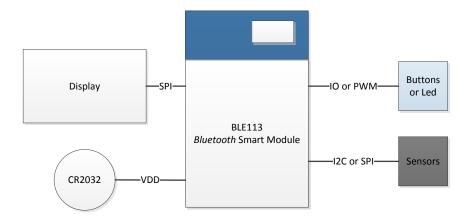

Applications: sport and fitness, medical and health care, smart energy, home automation, security, proximity and precence etc.



- Hosted architecture example using Bluegiga BLE113 module
 - Sensors and peripherals are directly connected to the MCU via the IO interfaces
 - BLE113 connected to the MCU via UART or USB
 - Application developerd to the MCU and interfacing to BLE113 done using BGAPI™ protocol (BGLib™ can be used on the host)
 - Profile developed with Profile Toolkit™

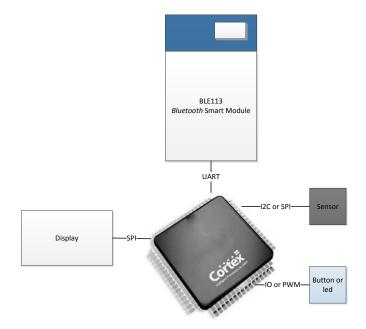







Bluetooth® Smart Software v.1.4

Feature Highlights

Highlight Features

New APIs

- Added API command to change the random MAC address
- New API ble_cmd_set_initiating_con_parameters added for configuring scanning parameters for Initiating State (establish connection)
- Added API to allow temporarily disabling of slave latency during runtime

BGScript

- Increased maximum BGScript size from ~30KB to 62 KB
- Multiple listeners for a single event in BGScript

Other

- Bluetooth v4.2 specification compliant devices bonding support added
- Watchdog support added











Thank You

